TOP AND CONSOLE PARTS

27"ELECTRIC DRYER

For Models: GEQ9800LW1, GEQ9800LG1
(White/Grey) (Biscuit/Gold)

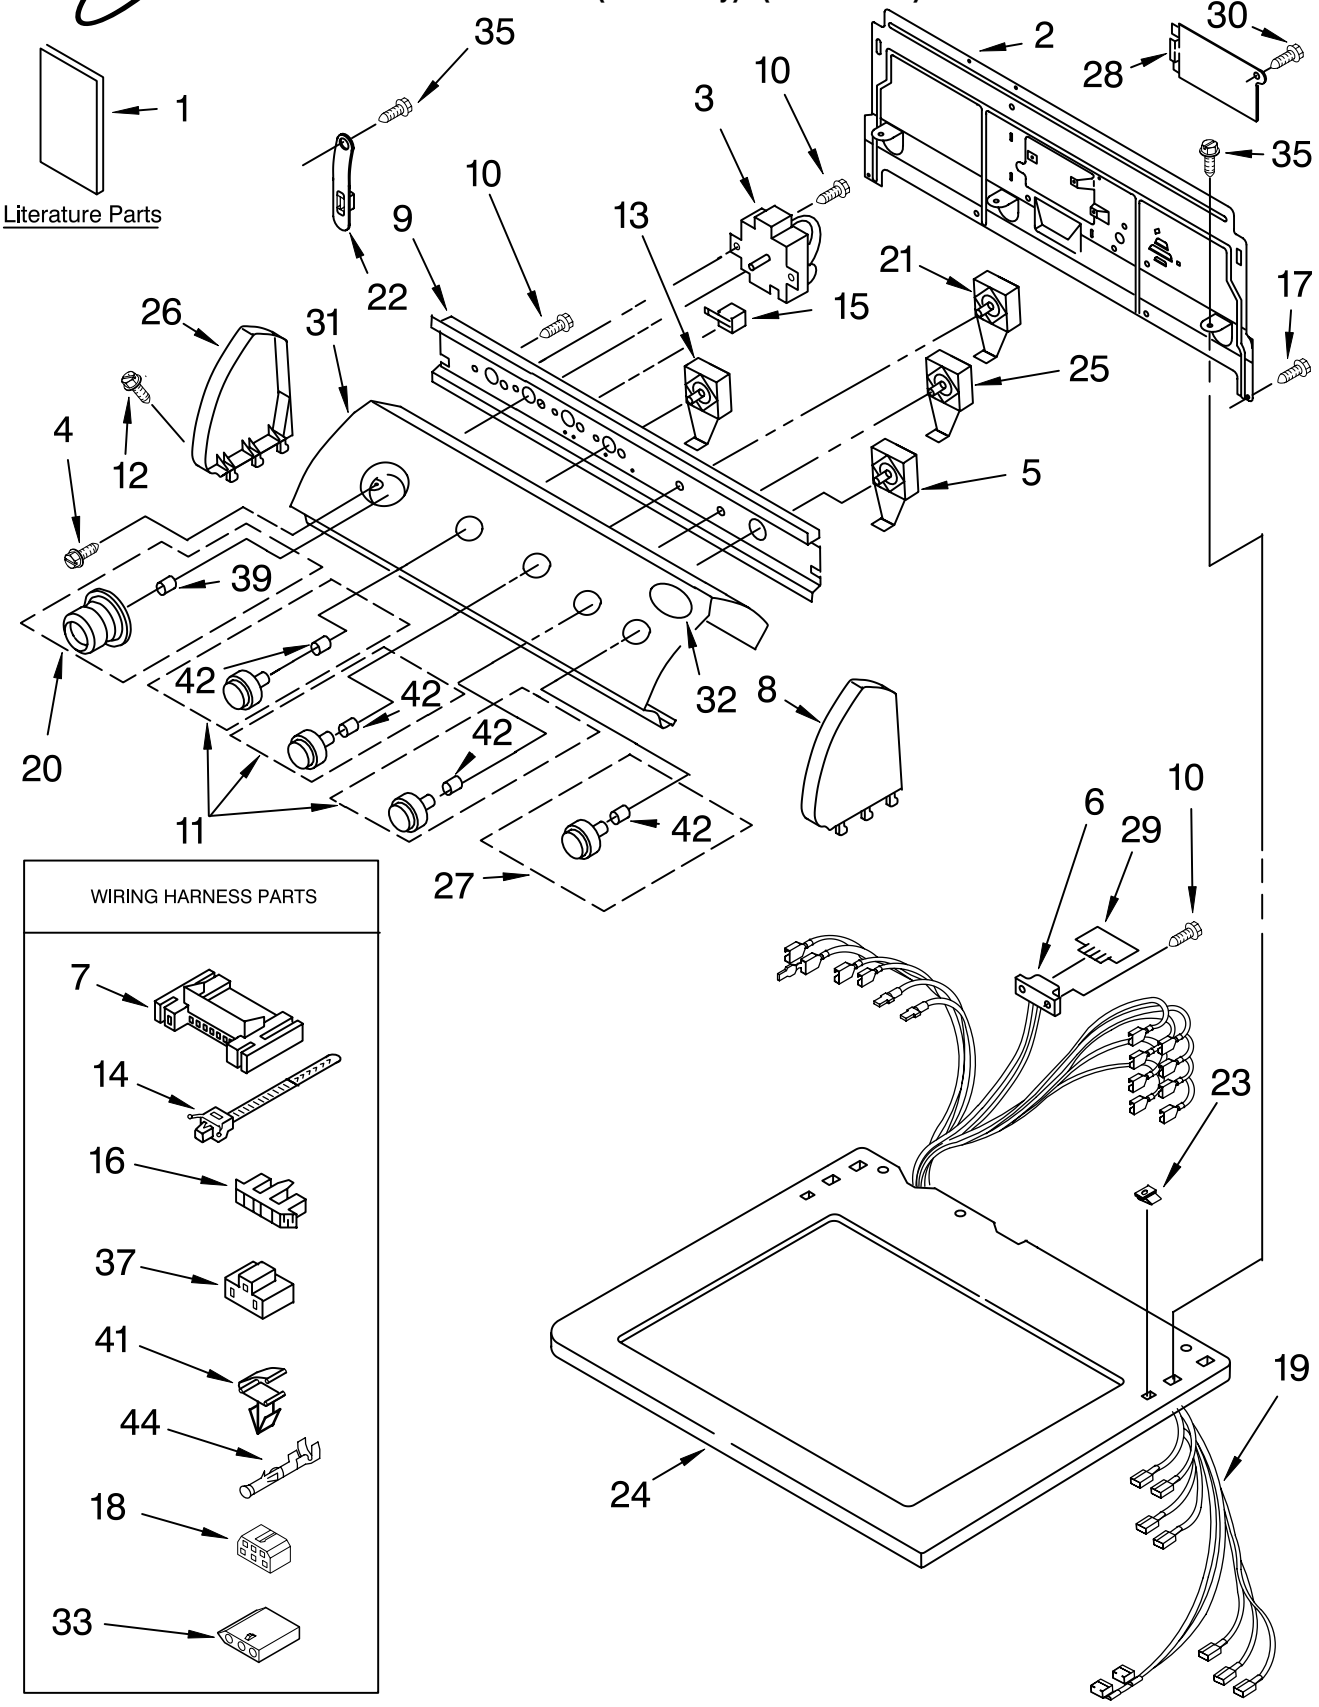

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CONSOLE PARTS

For Models: GEQ9800LW1, GEQ9800LG1
(White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT8541831	Wiring Diagram
	LIT8535837	Guide, Use & Care
	LIT8535840	Instructions Installation
		Following May Be Purchased
		DO−IT−YOURSELF REPAIR MANUALS
	LIT677818	Manual, Do−It−Yourself Repair (Dryer)
2	8317305	Panel, Rear Console
3	3406725	Timer, 60 Hz.
4	3400859	Screw, Grounding (8−18 x 7/32)
5	3398094	Switch, Push−To−Start
6	3391885	Connector, Edge
7	3395683	Connector (Motor)
8		Cap, End (R.H.)
	8271359	White
	8271362	Biscuit
9	8271316	Bracket, Control
10	3390646	Screw, 8−18 x 5/16
11		Knob, Control (3)
	8538957	GEQ9800LW1
	8538958	GEQ9800LG1
12	388326	Screw, Console
13	8528330	Switch, Temperature
14	3391018	Tie, Cable
15	694419	Buzzer, Mini
16	3397269	Connector, Timer
17	693995	Screw, 8−18 x 3/8
18	3347243	Connector, 6−Circuit
19	8299956	Harness, Electric
20		Timer Knob Assembly
	8538953	GEQ9800LW1
	8538954	GEQ9800LG1
21	3405154	Switch, Wrinkle Shield
22	8318255	Strap, Console
23	357213	Nut, Push−In (2)
24		Top
	8271399	White
	8271401	Biscuit
25	3405152	Switch, End Of Cycle
26		Cap, End (L.H.)
	8271365	White
	8271368	Biscuit
27		Knob, Push−To−Start
	8538959	GEQ9800LW1
	8538960	GEQ9800LG1
28	8317342	Cover, Terminal Block
29	3390537	Control, Electronic
30	3390814	Screw, 8−18 x 3/8
31		Panel, Control (Includes Illus. 32)
	8532641	Grey
	8532642	Gold
32	3955776	Medallion
33	3936144	Connector
35	3390647	Screw, 8−18 x 1/2
37	3401144	Connector (PTS Relay)
39	688805	Clip
41	3394427	Clip, Harness
42	8536939	Spring Clip
44	94614	Terminal

CABINET PARTS

For Models: GEQ9800LW1, GEQ9800LG1
(White/Grey) (Biscuit/Gold)

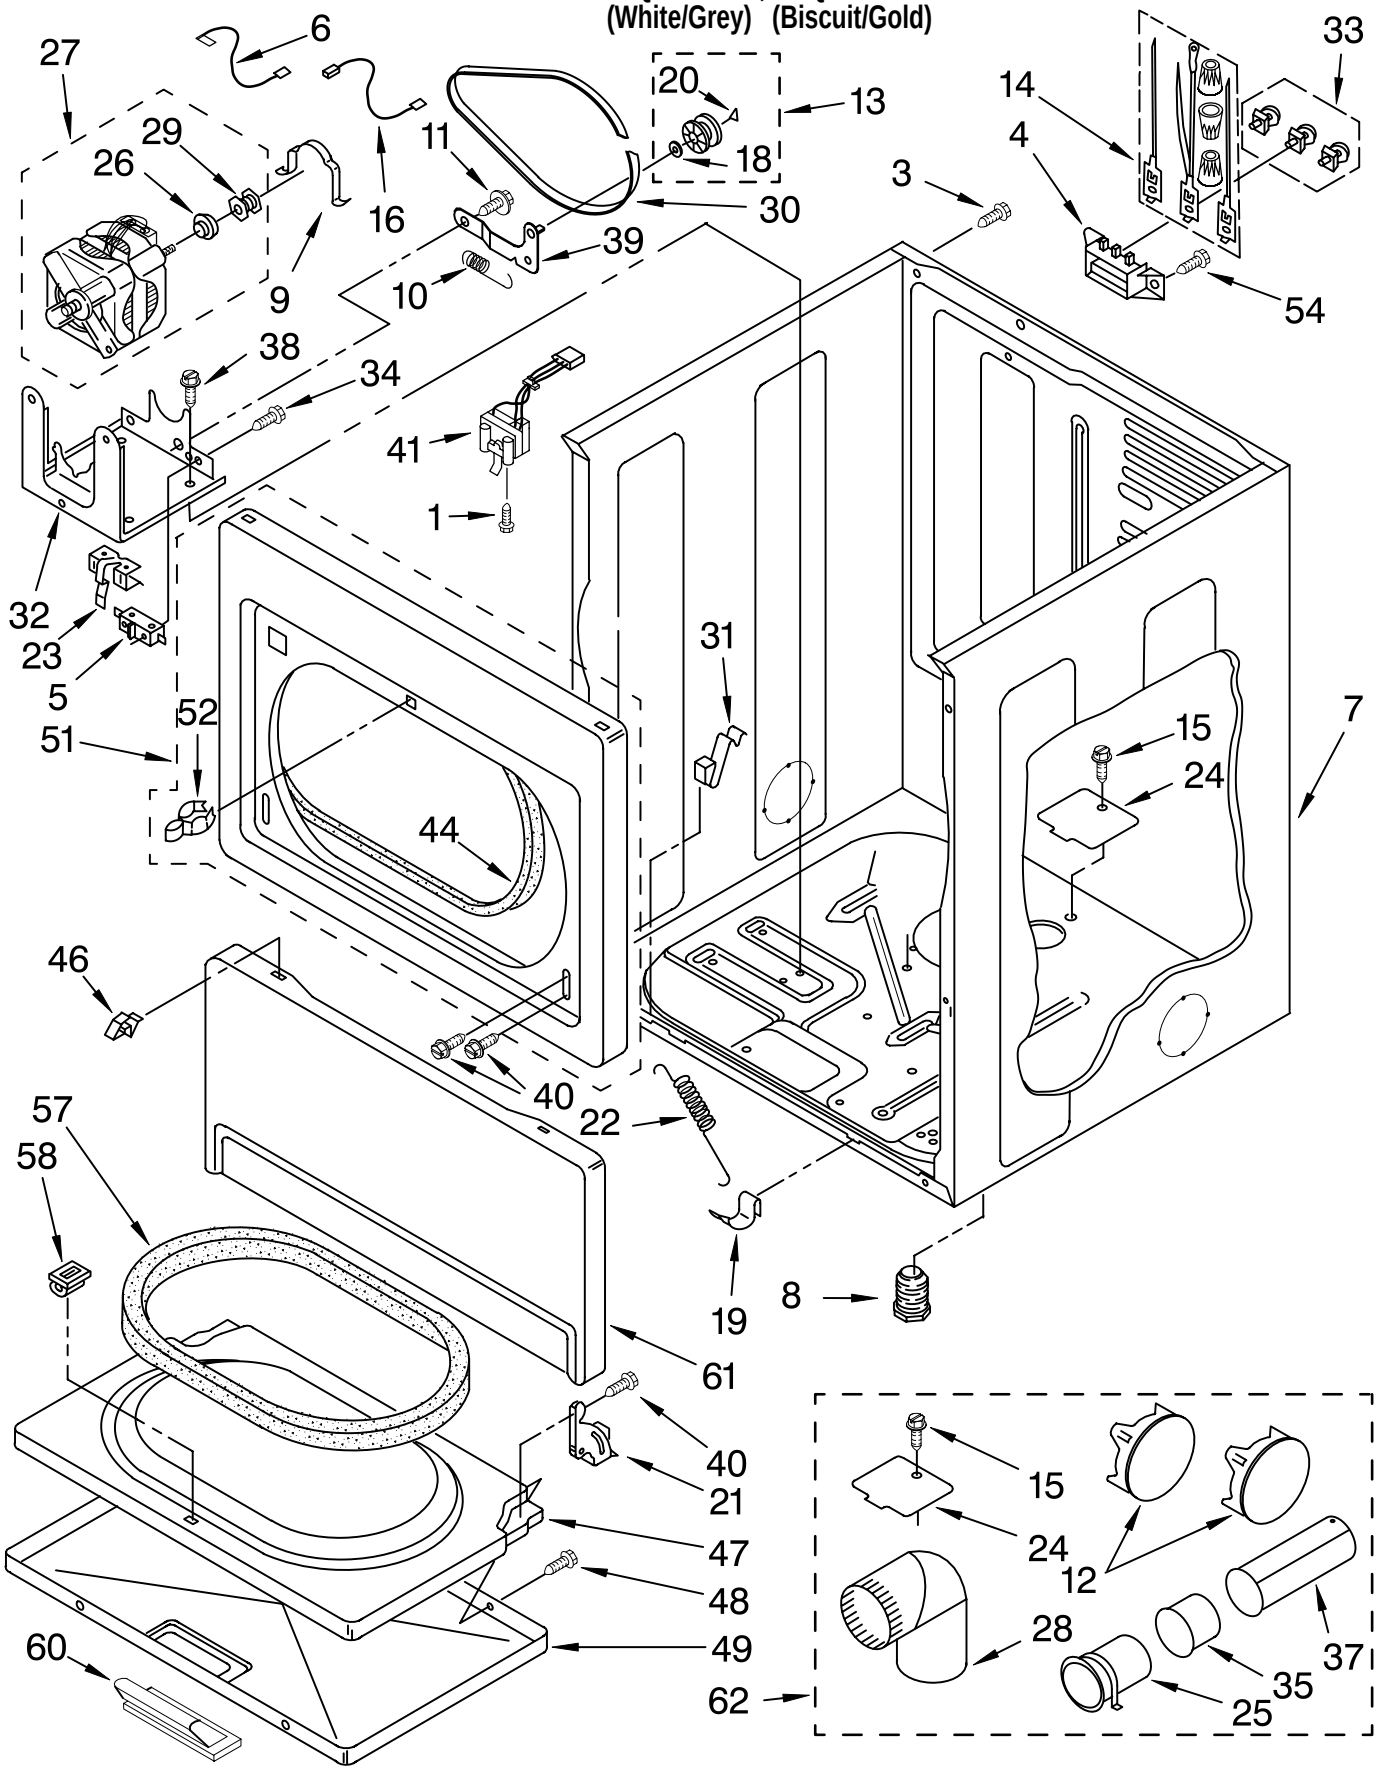

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET PARTS

For Models: GEQ9800LW1, GEQ9800LG1
(White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
1	697773	Screw, 6−20 x 7/8
3	697776	Screw, 10−32 x 5/8
4	3397659	Block, Terminal
5	3394881	Switch, Broken Belt
6	3398948	Wire, Jumper (Broken Belt Switch)
7		Cabinet
	8310656	White
	8310659	Biscuit
8	3392100	Foot, Dryer
	279810	Foot − Optional (Extended Length Package Of 2) (Not Included)
9	660658	Clamp, Motor (2)
10	3387374	Spring, Idler
11	3389420	Retainer, Idler
12		Plug, Multivent
	697750	White
	3388311	Biscuit
13	3388672	Pulley Assembly
14	279318	Terminal, Brass & Tinned (3) (Includes Illus. 33)
15	3390647	Screw, 8−18 x 1/2
16	3394081	Wire, Belt Switch
18	233520	Washer, Thrust
19	297092	Clip (2)
20	690997	Tri Ring
21	3387560	Hinge, Door (R.H.)
	3387559	Hinge, Door (L.H.)
22	3387565	Spring, Door (2)
23	8066120	Lever, Snap Switch
24	3394331	Cover−Plate
25	3395532	Exhaust Pipe & Bracket
26	3393657	Restrainer, Belt
27	8538263	Motor, Assembly 60 HZ.
28	49026	4" − 90° Elbow
29	3389729	Pulley 60 HZ.
30	3387610	Belt, Drive
31	3388600	Clip, Lint, Duct
32	3387118	Bracket, Motor
33	279393	Terminal Block Screw Kit (For Terminal Block)
34	98129	Screw, 6−20 x 1 3/8
35	3395534	Exhaust Pipe (Short)
37	3395535	Exhaust Pipe (Long)
38	3390663	Screw, 10−16 x 1/2
39	3388674	Idler Bracket
40	3357011	Screw, 10−16 x 1/2
41	3406107	Door Switch Assembly
44	3387242	Seal, Front Panel
46	3388229	Retainer
47	697655	Door, Rear
48	694091	Screw, 8−18 x 3/8
49		Door, Front
	8521938	White
	8521939	Biscuit
51		Upper Front Panel
	697227	White
	3977761	Biscuit
52	696144	Strike, Door
54	3393008	Screw, 10−16 x 1/2
57	3390736	Seal, Door
58	690081	Catch, Door Assembly
60		Handle, Door
	3979727	Grey
	3979726	Sage
61		Toe, Panel
	697215	White
	3977764	Biscuit

Optional Parts Not Included

Dryer Exhaust Kit
(For Side & Bottom Venting)

62	279818	White
	279925	Biscuit

BULKHEAD PARTS

For Models: GEQ9800LW1, GEQ9800LG1
(White/Grey) (Biscuit/Gold)

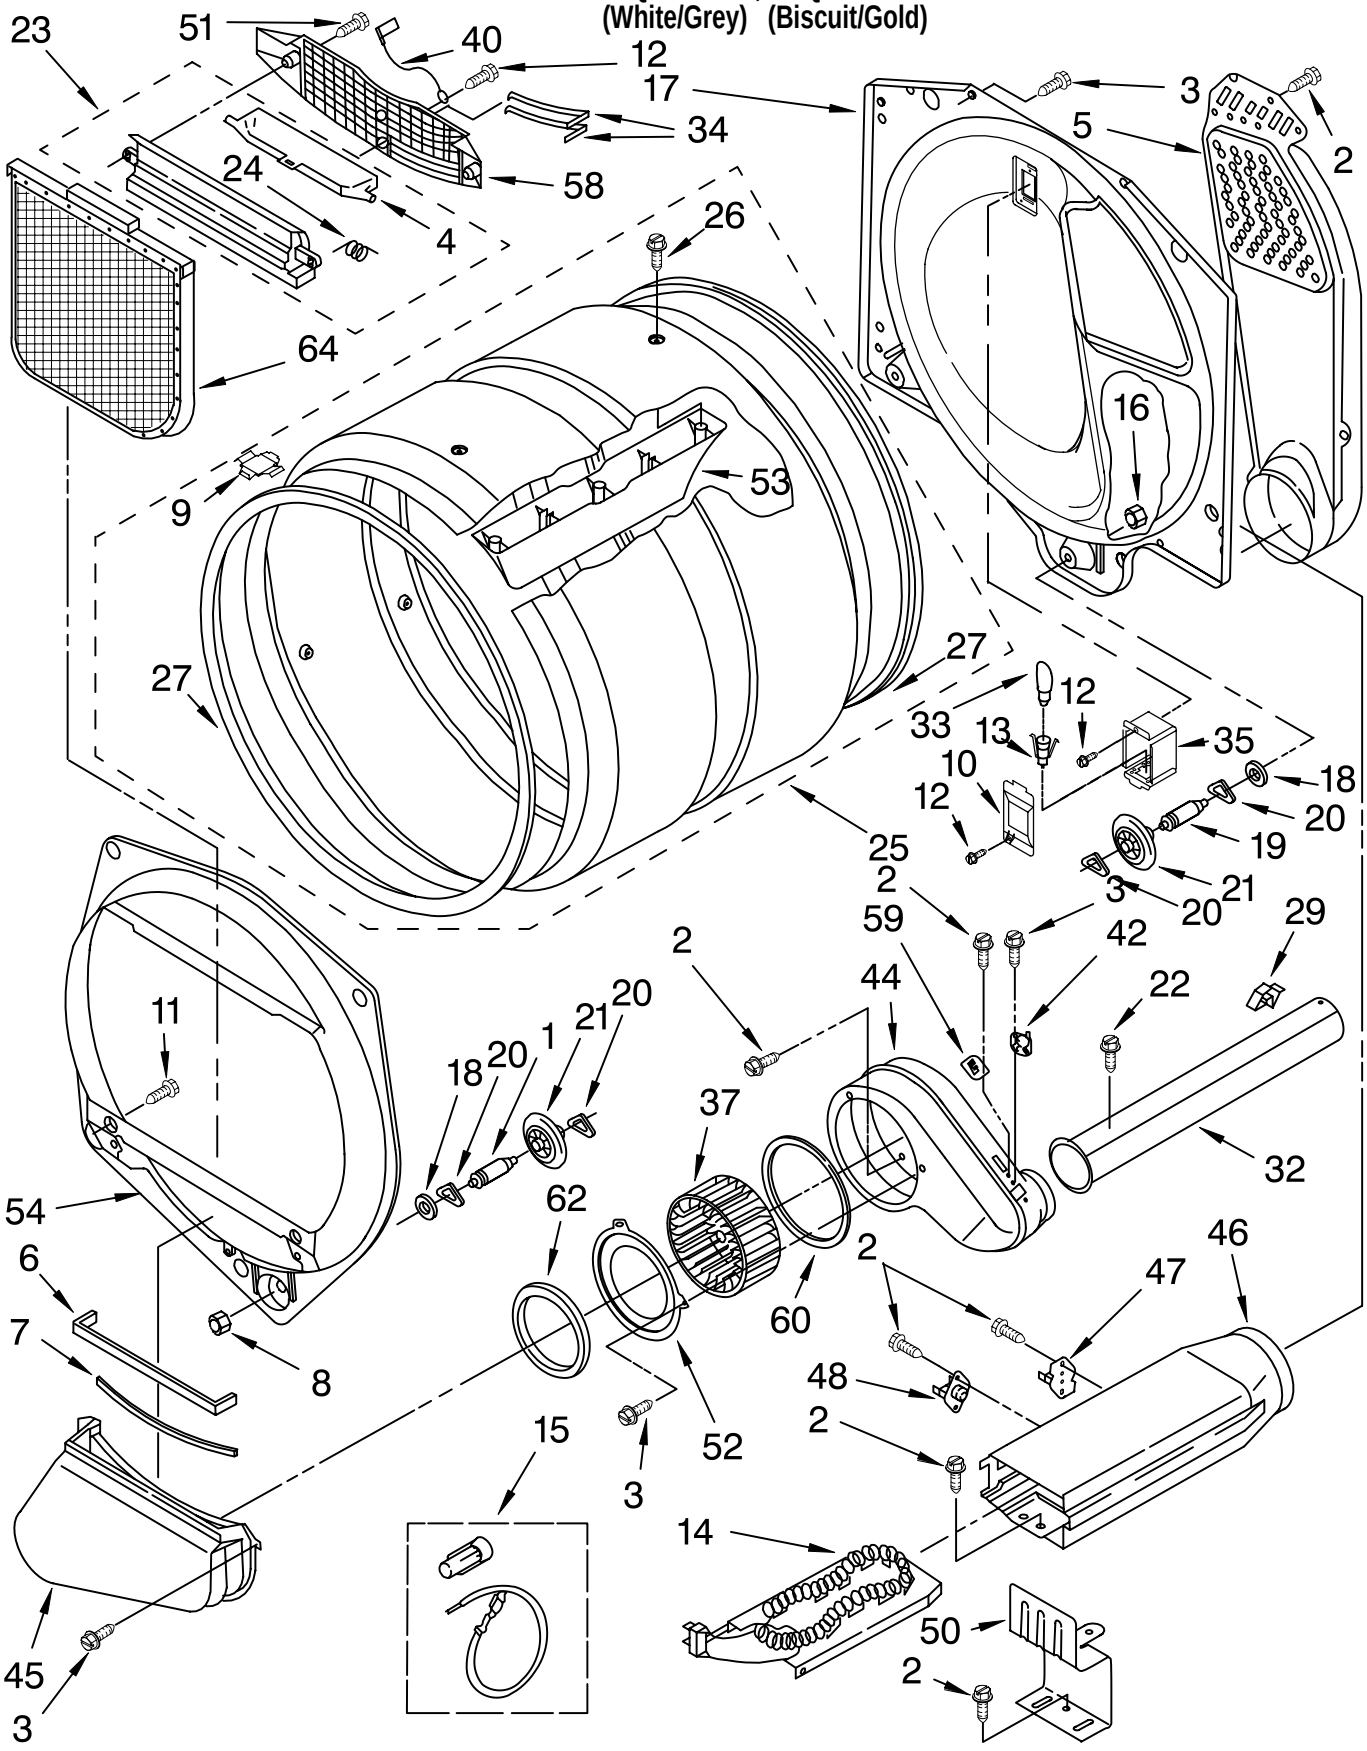

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BULKHEAD PARTS

For Models: GEQ9800LW1, GEQ9800LG1
(White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
1	3399508	Shaft, R.H. Thread
2	90767	Screw, 8−18 x 3/8
3	3390647	Screw, 8−18 x 1/2
4	3394984	Door, Lint Screen
5	697354	Air Duct Assembly
6	697813	Seal, Outlet Housing
7	697814	Seal, Drum Front
8	3359452	Nut,3/8 x 16(R.H.)
9	8066086	Drum Hole Plug
10	3402841	Lens, Drum Light
11	695240	Screw, 8−18 x 1/2
12	487909	Screw, 10−15 x 1/2
13	3403634	Socket, Light
14	3387747	Heater Element
15	279457	Terminal Wire Kit (For Heater Element Wiring Harness Repair)
16	3387709	Nut, 3/8−16 (L.H.)
17	8520836	Bulkhead, Rear
18	3387459	Washer, Support
19	3399509	Shaft, L.H. Thread
20	690997	Ring, Tri
21	8536973	Roller, Support
22	3390646	Screw, 8−18 x 5/16
23	3394985	Outlet Housing Assembly
24	3394986	Spring, Lint Screen Door
25	8318215	Complete Drum Assembly
26	97787	Screw, 11−16 x 3/4
27	697694	Seal, Drum
29	3388229	Clip
32	8318486	Exhaust Pipe
33	3406124	Bulb, Light
34	3387223	Electrode, Sensor
35	3977373	Bracket, Drum Light
37	697772	Wheel, Blower
40	3392258	Wire, Ground (Sensor)
42	8318268	Thermostat, Internal−Bias
44	8541568	Housing, Blower
45	8530036	Lint Duct Assembly
46	3392537	Heater Box
47	3977394	Thermal Cut−Off (Includes ILlus. 48)
48	3390291	Thermostat 250°F (121°C)
50	8066099	Bracket, Heater Box
51	3387230	Screw, 10−16 x 1
52	697771	Cover, Blower (Includes Illus. 62)
53	697693	Baffle, Drum
54	697557	Bulkhead, Front
58	8299979	Grill, Outlet
59	3392519	Thermal Fuse
60	697770	Seal, Cover Plate
62	697769	Seal, Lint Duct
64	3390721	Lint, Screen

OPTIONAL PARTS (NOT INCLUDED)

Illus. No.	Part No.	DESCRIPTION
		ACCESSORY PARTS
	4392067	Kit, Dryer Repair
	8522199	Kit, Dryer Vent Testing
	3406911	Dry Rack
		PAINT, TOUCH−UP (1/2oz.)
	72017	White
	4392899	Biscuit
		PAINT, PRESSURIZED SPRAY (12 oz.)
	350930	White
	4392901	Biscuit
	350938	Primer, Gray
		PAINT, BULK (1 qt.)
	799344	White (Uncut)
	4392900	Biscuit(Uncut)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST